 


Measuring Your Pool for a Replacement Cover

To create a profile of your pool, this guide will help you to provide the necessary dimensions to correctly order your replacement cover. Covers are made to order, so these measurements are extremely important.

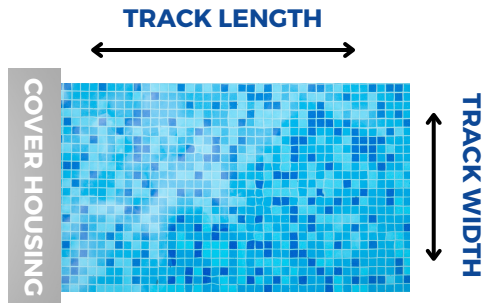


Step 1: Track Length

Measure the length of the pool down both sides starting at the end of the track and going all the way back to where the track meets the housing for the cover.

Step 2: Track Width

Measure the pool width in three locations, front, middle and the back, track to track. Calculate the average of these measurements.

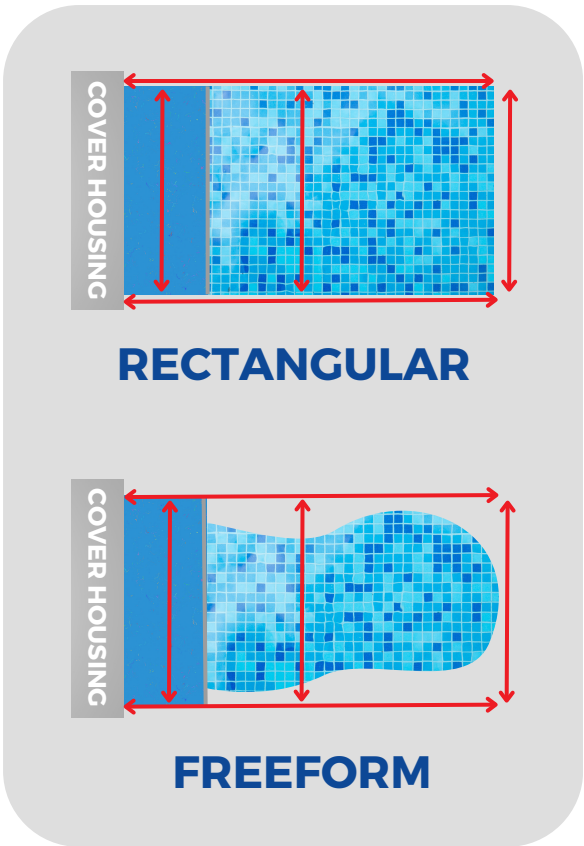

How to Determine the Motor-Side

Stand behind the cover housing and overlooks the water. The motor will be either to your left or right.





LEADING EDGE TYPE

What is a Leading Edge Bar?

The Leading Edge bar is attached to the forward edge of the pool cover, which is the edge that rolls out first when the cover is opening or closing. This bar is made of aluminum and helps ensure that the pool cover rolls out evenly and smoothly.

Loop (Hidden)

Leading Edge Bar is covered by fabric with minimal metal showing at the sides of your cover as it closes. This is the most common for Coverstar brand Autocovers



Rope (Exposed)

Leading Edge Bar is exposed and the metal is completely visible as your cover closes. Typically used on non-Coverstar systems. This can be easily converted to a looped cover if opting for a conversion kit.

Conversion Packages

Upgrade to premium Coverstar hardware with our Conversion Packages. Discounts available when switching from non-Coverstar products. Contact your local dealer or Mizu to learn more.

